 


Welcome

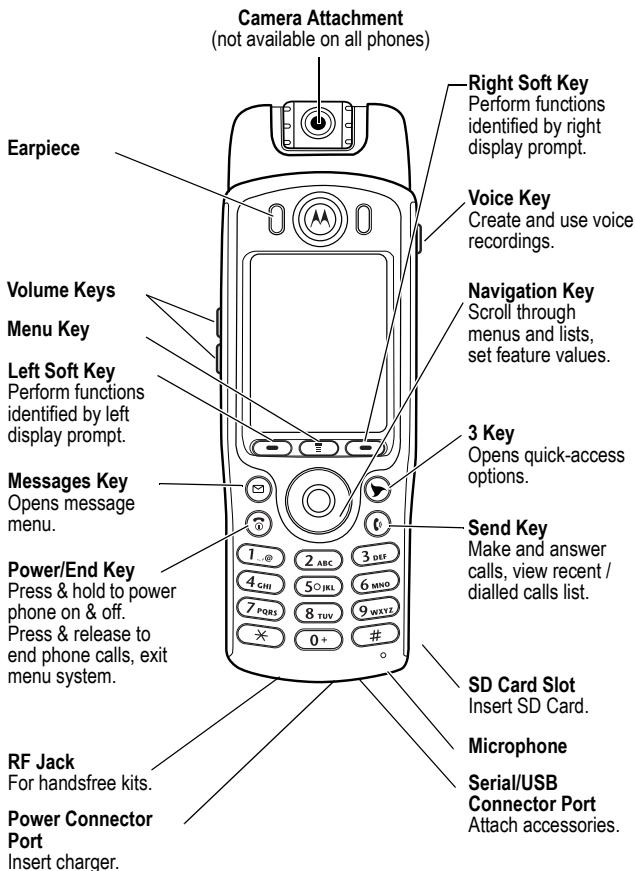

MOTOROLA, the Stylised M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. TrueSync, Sidekick, Starfish and the Stylised Starfish Logo are registered trademarks of Starfish Software, Inc., a wholly owned independent subsidiary of Motorola, Inc. All other product or service names are the property of their respective owners.

© 2001 Motorola, Inc. All rights reserved. Printed in the EU.































Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.


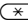 

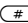 


Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Menu Map

Main Menu

-  **Messages**
-  **Phonebook**
-  **Recent Calls**
-  **Media Centre**
 -  Audio
 -  Pictures
 -  Video
-  **Settings**
(see next page)
-  **Games & Apps**
-  **Ring Styles**
-  **Office Tools**
 -  Calendar
 -  Voice Notes
 -  Calculator
-  **Extras**
-  **Shortcuts**
-  **Web Access**
 -  Browser
 -  Web Shortcuts
 -  Stored Pages
 -  History
 -  Go to URL
 -  Browser Setup
-  **Web Sessions**
-  **Facilities**
 -  SIM Applications
 -  Fixed Dial
 -  Service Dial
 -  Quick Dial
-  **Quick Menu**

Note: This is the standard phone menu layout. You may have changed the menu layout or changed some feature names. Not all features may be available for all users.

Shortcuts
Lock/unlock keypad: Press  
Display my phone number: Press  
Go to dialled calls list: Press 
Exit menu system: Press 

See page 57 for more about Shortcuts

Settings



Personalise

Main Menu
Home Keys
Power Up
Greeting
Banner
Banner Graphic
Wallpaper
Screen Saver
Quick Dial



Call Divert

Voice Calls
Fax Calls
Data Calls
Cancel All
Divert Status



Connection

IrDA Link
Active Call
Bluetooth Link
Sync
Incoming Call



Phone Status

My Tel. Number
Active Line
Battery Meter
User Account
Storage Devices
Other Information



Security

Phone Lock
Lock Keypad
Lock Application
Fixed Dialling
Call Barring
SIM PIN
Universal PIN
WIM PINs
New Passwords



Other Settings



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- Scroll
- Animation
- Language
- Battery Save
- DTMF
- Master Reset
- Master Clear



In-Call Setup

- In-Call Timer
- Call Guard
- Call Cost Setup
- My Caller ID
- Talk and Fax
- Call Waiting
- Answer Options



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Car Settings

- Auto Answer
- Auto Handsfree
- Power Off Delay
- Charger Time



Headset

- Auto Answer
- Ringer Options



Java Tools

Contents

Menu Map	3
Safety and General Information	8
Getting Started	16
What's in the Box?	16
About This Guide	16
Reinstalling the Camera	16
Installing the SIM Card	17
Installing the Battery	19
Charging the Battery	20
Battery Use	21
Turning Your Phone On	22
Adjusting Volume	23
Making and Answering Calls	23
Using Your Phone	25
Display Symbols	25
Using the 4-Way Navigation Key	27
Using the Message and 3 Keys	27
Using the Menu	28
Setting Up Your Phone	29
Entering and Editing Text	30
Calling Features	34
Redialling a Number	34
Using Caller ID	34
Dialling an Emergency Number	35
Inserting Special Characters into Dialling Sequences	36
Viewing Recent Calls	36
Using Voicemail	37
Voice Dialling	37
Speed Dialling	38

1-Touch Dialling	38
Using Call Waiting	38
Diverting a Call	39
Transferring a Call	39
Barring a Call	40
Putting a Call on Hold	41
Making a Conference Call	41
Using Other Features During a Call.	42
Messages and Email	43
Creating and Sending Messages.	43
Viewing Message Status	46
Receiving and Reading Messages	46
Phonebook	47
Items in a Phonebook Entry.	48
Storing a Phonebook Entry	48
Recording a Voice Name for a Phonebook Entry	50
Dialling a Phonebook Entry	51
Editing a Phonebook Entry	51
Using Phonebook Categories	52
Customising Your Phone Settings.	56
Customising Menus and Display	56
Using Shortcuts	57
Setting Your Display Timeout.	58
Getting More Out of Your Phone	59
Using Hands-Free Features	59
Dialling Options	59
Monitoring Phone Use	59
Network Features	61
Connecting Your Phone to an External Device	61
Data and Fax Calls	65
Using Sync.	66
Using an SD or MMC Card	67

Security	69
Line Security	69
Locking and Unlocking Your Phone	69
Changing Your Unlock Code	69
If You Forget Your Unlock Code	70
Locking and Unlocking the Keypad	71
Protecting the SIM Card	71
Personal Organiser Features	72
Calendar	72
Alarm Reminders	73
Voice Notes	74
Calculator and Currency Converter	77
News and Entertainment	78
Mobile Internet	78
Java Applications	79
Camera and Picture Viewer	80
Video Recorder and Viewer	83
Games	84
SIM Applications	85
Troubleshooting	86
Warranty Information	88
Specific Absorption Rate Data	93
Index	95

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION

READ THIS INFORMATION BEFORE USING YOUR PERSONAL COMMUNICATOR

The information provided in this document supersedes the general safety information contained in user guides published prior to October 2002.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Operational Characteristics

Your Personal Communicator contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy.

When you communicate with your Personal Communicator, the system handling your call controls the power levels at which your personal communicator transmits.

Exposure To Radio Frequency Energy

Your Motorola Personal Communicator is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency energy:

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J

- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
- National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- National Radiological Protection Board of the United Kingdom 1995
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation - Human Exposure) Standard 1999 (applicable to wireless phones only)

To assure optimal performance and make sure human exposure to radio frequency energy is within the guidelines set forth in the above standards, always adhere to the following procedures:

Portable Personal Communicator Operation and Radio Frequency Energy Exposure

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the Personal Communicator and may violate FCC and/or other applicable regulations and standards.

DO NOT hold the antenna when the Personal Communicator is "IN USE". Holding the antenna affects call quality and may cause the Personal Communicator to operate at a higher power level than needed.

Phone Operation

The Personal Communicator is designed to be used with a headset for talking and listening. The Personal Communicator can also be placed inside the holster, then the holster can be clipped onto your belt, pocket, handbag, or other apparel and used with the headset.

Body-worn Operation

To maintain compliance with FCC and/or other applicable regulations and standards, if you wear the Personal Communicator on your body when transmitting, always place the Personal Communicator in a Motorola supplied or approved clip, holder, holster, case, or body harness for this product. Use of non-Motorola-approved accessories may exceed FCC and/or other applicable regulations and standards. If you do not use one of the Motorola-supplied or approved body-worn accessories, and you are not using the phone held in the normal use position, ensure the phone and its antenna are at least one inch (2.5 cm) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least one inch (2.5 centimeters) from the body.

Approved Accessories

For a list of approved Motorola accessories, visit our website at www.mot.com.

Electromagnetic Interference/Compatibility

Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your Personal Communicator in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your Personal Communicator when on board an aircraft. Any use of a Personal Communicator must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, the United States Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the Personal Communicator more than six inches (15 centimeters) from their pacemaker when the Personal Communicator is turned ON.
- not carry the Personal Communicator in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn the Personal Communicator OFF immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Safety and General

Use in Vehicles

Check the laws and regulations on the use of phones in your vehicle. Always obey them.

When using your Personal Communicator in a vehicle, please:

- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call.

Operational Warnings

For Vehicles with an Air Bag

Do not place the Personal Communicator in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If the Personal Communicator is placed in the air bag deployment area and the air bag inflates, the Personal Communicator may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your Personal Communicator prior to entering any area with a potentially explosive atmosphere, unless it is especially qualified for use in such areas as “Intrinsically Safe” (for example, Factory Mutual, CSA, or UL Approved). Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn off your Personal Communicator when you are near electrical blasting caps, in a blasting area, or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Operational Cautions

Antennas

Do not use any Personal Communicator that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

Batteries

 
All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

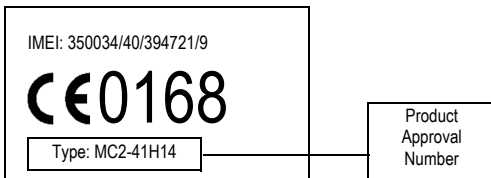

The above gives an example of a typical Product Approval

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

Getting Started

What's in the Box?

Your digital wireless phone has a battery and typically comes equipped with a charger. Other accessory options can customise your phone for maximum performance and portability.

About This Guide

Optional Features



Features marked with this label are optional network, SIM card, and/or subscription-dependent features. These features may not be offered in all geographical areas. Contact **3** for information about availability.

Optional Accessories



Features marked with this label require the use of an optional Motorola Original™ accessory.

 
Reinstalling the Camera

Note: The camera attachment is not available on all phones.


You can attach or remove a camera for your phone. For more about camera features, see “Camera and Picture Viewer” on page 80.

Do This


- 1 If necessary, push down the battery door release latch and lift the door off the phone.

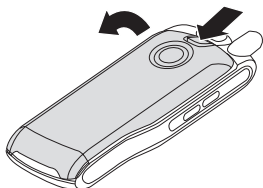

 - 2 Replace the battery door with the camera accessory, inserting the phone's antenna into its hole.

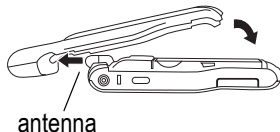

 - 3 Slide the camera latch closed to secure the camera in place.

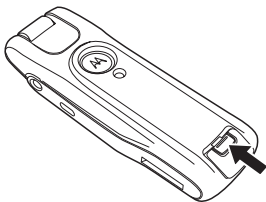

Installing the SIM Card

 
Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory. Your phone can use GSM SIM cards, but not all features will be available.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.


If a camera is installed, you need to remove it to access your SIM card. See “Reinstalling the Camera” on page 16.

Do This


- 1 If necessary, push down the battery door release latch and lift the door off the phone.

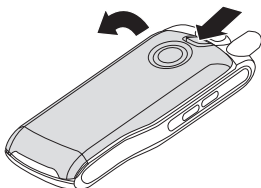

 
- 2 Slide the SIM card door down and lift open.

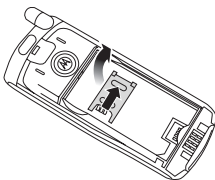

 - 3 Insert the SIM card into the SIM card tray with the notch in the lower left corner and the gold plate facing down.

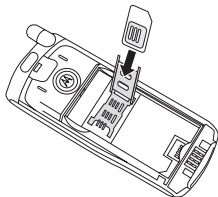

 - 4 Close the SIM card door and slide it up to lock the SIM card in place.

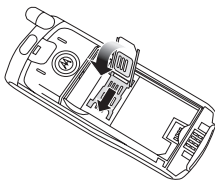

Installing the Battery

You must install and charge the battery to use your phone.



 
Caution: Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

If your camera is installed, you need to remove it to access your battery. See “Reinstalling the Camera” on page 16.


Do This

- 1 Remove the battery from its protective clear plastic case.

- 2 If necessary, push down the battery door release latch and lift the door off the phone.

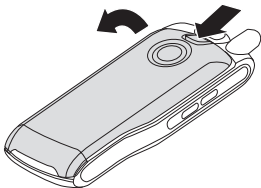


 - 3 Insert the battery, printed arrow first, **under the tab** at the bottom of the battery compartment and press the top of the battery into place.

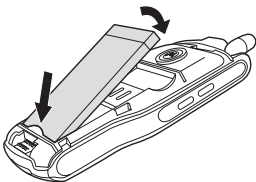

Do This

 - 4 Insert the hooks at the bottom of the battery door into the base of the phone, then push the door on to snap it into place.

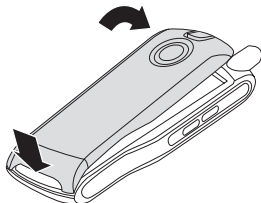


Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery, as indicated by the following instructions. Some batteries perform best after several full charge/discharge cycles.

Do This

 - 1 Plug the travel charger into your phone with the release tab facing up.

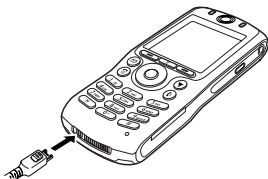

-
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
 - 3 When your phone indicates that the battery is fully charged (**Charge Complete**), press the release tab and remove the travel charger.
-
-

Note: When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete.

Battery Use

Battery performance depends on many factors, including 3s network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; and your voice, data, and other application usage patterns.

Battery Care

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximise your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods. Never dispose of batteries in a fire because they may explode.

Extending Battery Life

- **Turn off your display backlight**
The backlight uses power. To turn it off, see page 30.
- **Turn off the screen saver**
Using an animated screen saver reduces your phone's talk and standby time. To turn it off, see page 56.
- **Use the display timeout**
You can tell your phone display to turn off when you are not using it. See page 58.
- **Avoid keypad-intense functions**
Activities that require intensive keystroke use (such as playing a game or using messaging) reduce your phone's talk and standby time.
- **Avoid the Vibrate ring setting**
Your phone's **Vibrate** ring setting uses more power than a standard ring sound or the **Silent** setting.



Turning Your Phone On

Do This

- 1 Press and hold the power key

To

turn on your phone

-
- 2 If necessary, press  to scroll to the User Account you want, then press **SELECT** ().
-

select the user account you want from the list of accounts (stored on the SIM card)

Do This

- 3 If necessary, enter your SIM card PIN code and press **OK** (OK)

To

unlock your SIM card

Caution: If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your phone displays **SIM Blocked**. See page 71.

-
- 4 If necessary, enter your four-digit unlock code and press **OK** (OK)
-
-

unlock your phone

Adjusting Volume

Press the upper and lower volume keys to:

- increase and decrease earpiece or speakerphone volume during a call
- increase and decrease the ringer volume setting when the idle display is visible
- turn off an incoming call alert

Making and Answering Calls

This section summarises the most basic calling features. For more features, see “Calling Features” on page 34.

Making a Call

To call a number, your phone must:

- be turned on with the phone and keypad unlocked
- have a SIM card inserted and unlocked
- have a network connection with adequate signal strength

Press

1 keypad keys

To

dial the phone number (up to 32 digits)

Tip: If you make a mistake, press **DELETE** (☒) to delete the last digit, or press and hold **DELETE** (☒) to clear all digits.

2 (☎) (send key)

make the call

3 (☎) (end key)

end the call when it is done

Note: You can make an emergency call even when the phone is locked, or when a SIM card is not inserted. See “Dialling an Emergency Number” on page 35.

Answering a Call

To answer a call, your phone must:

- be turned on with the phone unlocked
- have a SIM card inserted and unlocked
- have a network connection with adequate signal strength

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press

1 (☎) or
ANSWER (☒)

To

answer the call


2 (☎) (end key)

end the call when it is done

Using Your Phone

See page 1 for a diagram of your phone that describes basic phone components.

 Display Symbols

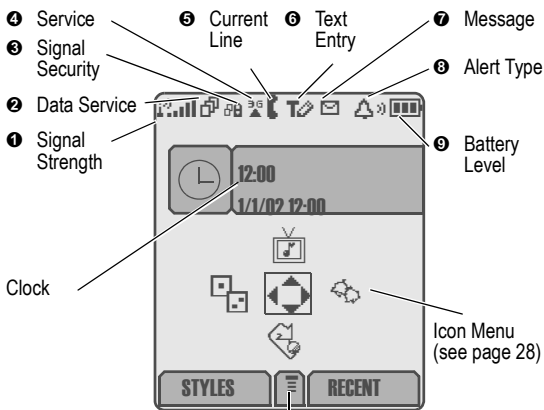

When the Menu Indicator (☰) appears, you can press (☷) to open a menu. See "Using the Menu" on page 28.

1 Signal Strength Indicator Shows the strength of your phone's connection with the network.

Strong  No signal

You cannot make or answer calls when the "no signal" indicator is displayed.



2 Data Service Indicator Indicates when a packet data connection is available. This type of connection can allow faster data transfer speeds.

3 Signal Security Indicator Indicates when you have a secure connection for packet data transfers, embedded application connections, or circuit switch data calls.



4 Service Indicator Indicates when your phone uses your home network (📶) or another network (🌐). When you leave your home network area, your phone *roams* or seeks another network.

5 Current Line Indicator Tells you when you have Voice Privacy on, a call in progress, or Call Diverting on. This icon also tells you which line is active (if you have a call on hold), and whether you have Caps Lock, Numeric Entry, or Symbol Entry switched on (when entering text).

6 Text Entry Indicator Indicates your Text Entry Method whenever you are in a text editor (Tap, iTap, etc.). See “Entering and Editing Text” on page 30.



7 Message Indicator Indicates when you have a new voice or text message waiting.

8 Alert Type Indicator Shows the current selected alert profile. The default alert setting is a ringer.

🔔 = loud ring

🔔 = soft ring

🔔 = vibrate

🔔 = ring and vibrate

🔔 = silent

Battery Level Indicator Shows the amount of charge left in your battery. The more bars visible, the greater the charge.

 
High     Empty

Recharge your battery as soon as possible when you see the **Low Battery** warning message and hear the low battery alert.

Note: When you charge the battery, the battery level indicator instead shows how much of the charging process is complete. See “Charging the Battery” on page 20.

Using the 4-Way Navigation Key

Use the 4-way navigation keys like a joystick to navigate the menu system, change feature settings, and play games.

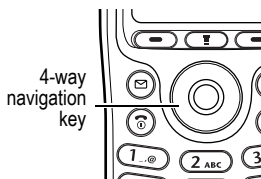

Tip: Down and up are your primary movements within menus. Move left and right to change feature settings, navigate the calendar, and edit text.

 
Using the Message and 3 Keys

Your phone has special keys that give you access to important features. Your Messages key (✉) instantly opens your messages, while your 3 key (3) opens a menu of 3 services. Press ⬆ up and down to choose the service you want, then press **SELECT**. To get back to this menu when you are in a service, just press ⬇. To close it, press ⬆.





Using the Menu

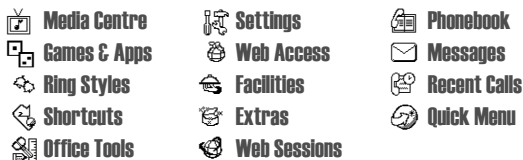Using the Icon Menu

When your phone is idle, it displays four easy-access icons. The following icons may appear.



To change this menu, see “Customising Menus and Display” on page 56.


Press  up to select the icon on the top, press  left to select the icon on the left, and so on. You can also press the right or left soft keys ( ) to select the program named in the display just above the key.

Navigating Through the Menu

This guide shows you how to navigate to a specific menu feature as follows:

Find the Feature

 **Media Centre**
> Pictures

The > symbol means that you should scroll to and select the feature. This example shows that you must press , scroll to and select **Media Centre**, then scroll to and select **Pictures** to view a picture stored on your phone.

Setting Up Your Phone

You can adjust a wide variety of phone settings to suit your needs.

Setting the Time and Date

Find the Feature

 > **Settings** > **Other Settings**
> **Initial Setup** > **Time and Date**

Choosing Alert and Ring Tones

Your phone rings or vibrates to notify you of an incoming call, message, or other event. This ring or vibration is called an *alert*. The alert setting indicator in your display shows the current alert profile (see illustration on page 25).

Select an Alert Profile

Find the Feature

 > **Ring Styles** > **Alert**
> *the profile you want*

Customise an Alert Profile

Tip: This feature lets you set the profile's ringer volume and keypad volume.

Find the Feature

 > **Ring Styles** > **Alert Detail**
> *the event*
> *the alert you want*

Setting Your Backlight

You can set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power:

Find the Feature

 > **Settings** > **Other Settings**
> **Initial Setup** > **Backlight**

Setting Display Animation

You can turn animation off (to conserve the battery) or on. Animation makes your phone's menus move smoothly as you scroll up and down.

Find the Feature

 > **Settings** > **Other Settings**
> **Initial Setup** > **Animation**

Entering and Editing Text

Various text entry methods make it easy for you to enter names, numbers, and text messages on your phone.

Choosing a Text Mode

To activate a text mode, press  from any text entry screen and select the text mode from the **Entry Method** menu:

- | | |
|----------------|---|
| ITAP | Let the phone predict each word as you enter it, then choose the word from a list. |
| Numeric | Enter only the number that appears on each key. |
| Symbol | Enter symbols only. |
| Browse | Browse through your phonebook and recent calls lists to select a name or number to enter. |


Tap

Enter characters one at a time by pressing the key for the letter, number, or symbol. This is the standard mode for entering text on your phone.

Note: The text mode you select remains active until you change it by selecting another mode.

 
 

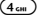 



General Text Entry Rules

Use the keypad to enter letters, numbers, symbols, and other characters with the tap method. Press the same key repeatedly to cycle through available characters. (See the “Character Chart” on page 31.)

- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- The first character of each sentence is capitalised unless you manually change it. (Press  down to force the character to lowercase while it is highlighted by the block cursor.)

Character Chart

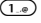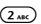 Use this chart as a guide for entering spaces, numbers, letters, symbols, and other characters with the tap method.

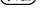
	space . 1 ? ! , @ _ & ~ : ; " - () ' ` ¡ ¢ £ \$ ¥ ¤ €
	a b c 2 ä å á à â ã α β ç
	d e f 3 δ ë é è ê φ
	g h i 4 ï í î γ
	j k l 5 λ
	m n o 6 ñ ö ø ó ò ô õ ω
	p q r s 7 π β σ

8 TUV	t u v 8 θ ü ú ù û
9 WXYZ	w x y z 9 ξ ψ
0+	+ - 0 x * / \ [] = > < # §


Your phone model may not include all of the characters shown in the above chart.

Copying, Cutting, and Pasting Text

You can copy, cut, and paste characters in the text and number editors.

In an editor, press  to see the following options:

Option	Description
Copy Text	tells your phone to copy the text you are about to highlight (see “Highlighting Text” below)
Copy All Text	copies all text in the editor
Cut Text	tells your phone to cut the text you are about to highlight (see “Highlighting Text” below)
Cut All Text	cuts all text in the editor
Paste	pastes the text you cut or copied
Undo	undoes the last copy, cut, or paste action in the current text editor

Note: The **Copy All Text** option also appears in the menu (press ) when you are viewing details for a Phonebook entry, Calendar event, Browser page, Text Message, or Recent Calls entry.

Highlighting Text

In a text editor, to highlight and copy or cut text:

Find the Feature

 > **Copy Text** or
Cut Text

Press

1 

To

scroll to the beginning of the text you want to copy or cut

2 **START** ()

turn on the highlighting marker

3 

scroll to the end of the text you want to copy or cut

4 **COPY** ()

copy or cut the text, as you selected

or

CUT ()

You can now paste the text in another text editor.




Text remains on your clipboard, available to paste, until you copy or cut other text or until you turn off your phone.

Calling Features

This chapter describes features related to making and answering calls. For information about other call-related features, see “Viewing Recent Calls” on page 36 and “Data and Fax Calls” on page 65. For basic instructions on how to make and answer calls, see pages 23–24.

Redialling a Number


You can redial a previously dialled phone number, whether the call was connected or busy. From the idle display:

Press	To
1 	go directly to the dialled calls list
2 	scroll to the entry you want to call
3 	redial the highlighted number

Using Caller ID



The *calling line identification* (caller ID) feature lets you see who is calling before you answer. If the caller's name is stored in your phonebook, the phone automatically displays the **Name**.


- If caller ID information is not available, your phone displays the message **Incoming Call**.
- While dialling (with digits visible in the display), Press  > **Hide ID/Show ID** to Hide (or show) your caller ID for the next call

Dialling an Emergency Number

3 may program one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted. **3** can program additional emergency numbers into your SIM card. *However, your SIM card must be inserted in your phone in order to use the numbers stored on it.* See **3** for additional information on this issue.


Note: *Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.*

To call the emergency number at any time:

Press	To
1 keypad keys	dial the emergency number (such as 999)
2 	call the emergency number

Inserting Special Characters into Dialling Sequences

While dialling (with digits visible in the display):

Do This	To
<p>Press  and then scroll to and select one of the following:</p> <ul style="list-style-type: none">• Insert Pause (to insert a p)• Insert Wait (to insert a w)• Insert 'n' (to insert an n)	<p>insert a special character when making a call that requires you to enter additional digits (for example, to make a calling card call, or to retrieve messages from an answering machine):</p> <ul style="list-style-type: none">• Pause tells your phone to wait until the call connects before it automatically dials the next digit(s) in a series.• Wait tells your phone to wait until the call connects, and then to prompt you for confirmation before it dials the next digit(s).• 'n' tells your phone to prompt you for a number before dialling the call. The number you enter is inserted into the dialling sequence in place of the n character.

Viewing Recent Calls

You can view and call numbers from calls you recently dialled or received:

Find the Feature

 > **Recent Calls** > **Received Calls**
or
Dialled Calls > *entry to see*

Press  to dial the entry displayed.


Using Voicemail



You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone. Contact **3** for more details.

Your voicemail number is stored in your phone to make it faster and easier to use your voicemail. Your voicemail number can be provided by **3**.

Receiving a New Voicemail Message

When you receive a voicemail message, your phone displays **New VoiceMail** .

Do This

Press **CALL** (.

To

call your voicemail phone number and listen to the message

Listening to a Voicemail Message

To listen to your voicemail messages at any time.:

Find the Feature

 > **Messages** > **VoiceMail**



Voice Dialling

To voice dial a phone number stored in your phonebook:

Do This	To Call
Press and release the voice key, then say a voice name	a phonebook entry using voice dial To record a voice name, see page 50.

Speed Dialling

 When you store an entry in your phonebook, it is assigned a unique speed dial number. You can then use the speed dial feature to call the entry.

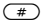Press	To
1 keypad keys	enter the one-, two-, or three-digit speed dial number for the entry you want to dial
2 	submit the number
3 	call the entry

1-Touch Dialling

You can call phonebook entries 1 to 9 with the push of a single key. Press and hold the one-digit speed dial number for one second. You must Assign the 1-touch dial feature to numbers 1 to 9 in your phone memory phonebook or SIM card phonebook:

Find the Feature  > **Settings** > **Other Settings**
> **Initial Setup**
> **1-Touch Dial**

Using Call Waiting



An alert tone sounds while you are on a call to indicate that you have received a second call.

To activate or deactivate call waiting:

Find the Feature  > **Settings** > **Other Settings**
> **In-Call Setup** > **Call Waiting**

To put the first call on hold and answer the second call:

Press

1 

To

answer the new call

Diverting a Call



Call diverting sends your phone's incoming voice, fax, and/or data calls directly to another phone number.

Find the Feature



> **Settings** > **Call Divert**

The call diverting options for voice, fax, or data calls are:

Option	Description
All Calls	diverts all calls
If Unavailable	diverts calls if your phone is unavailable
Detailed	uses different diverting numbers if you are out of range, unable to answer, or busy (<i>voice calls only</i>)
Off	does not divert calls

Transferring a Call

You can directly transfer a call without talking to the person who answers.

Find the Feature



> **Transfer**

Press

1 keypad keys

To

enter the phone number where you are transferring the call

2 

dial the phone number

Your phone displays the message **Transfer: Complete** when the call is transferred. You can hang up the phone when you see this message.

Barring a Call



Call barring lets you restrict outgoing or incoming calls. You can restrict all calls, calls to international numbers, or calls while roaming.

Find the Feature

 > **Settings** > **Security**
> **Call Barring**

Press1 **To**scroll to **Outgoing** or **Incoming** calls2 **CHANGE** ()select barring for **Outgoing** or **Incoming** calls3 

scroll to a restriction for the barred calls

4 **SELECT** ()

select the restriction for the barred calls

5 keypad keys




enter your call barring password

6 **OK** ()

submit your password

Putting a Call on Hold









While you are on a call:

Do This	To
Press HOLD () (if available) or Press  > Hold	put a call on hold Your phone displays a  (flashing phone) indicator to indicate that the call is on hold.

Making a Conference Call



To talk to more than one person on a call, you can make a conference call. Call the first person, call the second person, then link the two calls.

Press	To
1 keypad keys	dial the first person's number
2 	call the number
3 HOLD () (if available) or  > Hold	put the first call on hold Your phone displays a  (flashing phone) indicator next to the call on hold.
4 keypad keys	dial the next person's number
5 	call the number Your phone displays a  (active call) indicator next to the new active call.
6 LINK ()	connect the two calls
7 	end the entire call

Tip: Repeat steps 3-6 to add additional parties to the conference call.

Using Other Features During a Call

During a call, you can easily switch to other phone features or make a new Data, Fax, Browser, or Voice Call connection:

Press	To
SWAP (⇐)	open a list of options

The list of options includes phone applications, such as **Phonebook** and **Calendar**. It also includes any other active connections you have, such as **Active Data Call**, **Active Voice Call**, or **Active Browser**. To start a new voice call, select **New Call** (this puts any current voice call on hold).

Changing Your Active Call Settings

You can view and change the number of call and data/fax/browser connections that your phone allows at one time:

Find the Feature	☰ > Settings > Connection > Active Calls
-------------------------	--

The Active Calls list includes

Option	Description
No. of Calls	the number of active connections your phone allows, which you can increase to the number in the Subscription setting.
Subscription	the maximum number of active connections you subscribed to
Network	the maximum number of active connections your network supports

Messages and Email



Text messages are brief messages that you can send and receive (such as **Where are we meeting?**). Received messages appear on your phone display or in your text message inbox.

Note: 3 has already programmed the text message inbox settings for you.

Creating and Sending Messages

You can create and send a message to one or more recipients. The message feature lets you manually enter each recipient's phone number, or select one or more numbers from the phonebook or recent calls lists. You can also send a message to a Mailing List containing multiple addresses (see "Storing a Phonebook Entry" on page 48 to create a Mailing List).

There are four different types of messages: **Short Message**, **Email**, **Letter**, and **Postcard**. For a description of the items in each message type, see "Message Contents" on page 44.

Note: When you manually enter multiple phone numbers in the **To** field, you must insert a space between each number. Press and hold **1** to insert a space as needed.

Find the Feature

☰ > **Messages**
☰ > **Create Message**

Press

1 **⊙**


To

scroll to **New Short Message**,
New Email, **New Letter**, or
New Postcard

Press	To
2 SELECT (⏎)	select the type of message you want to send
3 keypad keys	complete the message contents (see the table after this procedure)
4 DONE (⏎)	finish the message Your phone displays Send Message Now?
5 YES (⏎)	send the message <i>Note: Your phone sends Email messages the next time it checks your account, or when you select</i> <ul style="list-style-type: none"> ⏎ > Messages ⏎ > Send/Receive Mail
or	
NO (⏎)	cancel the message or save it as a Draft

Message Contents

Item	Description
To (all message types)	one or more phone numbers or email addresses where you want to send the message You can press BROWSE (⏎) to select one or more phone numbers or email addresses from the phonebook or recent calls lists

Item	Description
CC (Text Plus and Multimedia Message only)	phone numbers or email addresses where you want to send a carbon copy of the message
BCC (Text Plus and Multimedia Message only)	phone numbers or email addresses where you want to send a blind carbon copy of the message (nobody can see their address, and they cannot see the other addresses)
Msg (all message types)	<p>the text message you enter (see “Entering and Editing Text” on page 30) or Multimedia Message you select</p> <p>To insert a picture or other object in Text, Email or Text Plus messages, press:</p> <p style="text-align: center;"> > Insert > <i>object type</i> > <i>object</i></p>
Subject (Text Plus and Multimedia Message only)	the subject line of the message
Priority (not for Text Messages)	the message priority
Receipt (Text Plus and Multimedia Message only)	select a type of receipt you want to receive after you send the message

Viewing Message Status

Text messages that you send are stored in the outbox. To view the contents of your outbox:

Find the Feature

 > Messages > Outbox

Messages are sorted from newest to oldest. The following icons indicate message status:

» sending in progress

 delivered


✕ sending failed

Note: Some status indicators are not supported by Email messages.

Receiving and Reading Messages


Note: Your phone checks for new Email messages periodically, or whenever you select

 > Messages  > Send/Receive Mail

When you receive a new message, your phone displays **New Message**  and gives an alert. When your inbox is full, you must delete old messages before you can open new ones.

From the new message notification:

Press

READ ()

To

open the message (or your text message inbox if there are multiple messages)

-
-
- If you receive a message with a file attached, you can save phone memory by storing the file on an SD/MMC card. See “Using an SD or MMC Card” on page 67.




Phonebook

You can store a list of names and phone numbers or email addresses in your phone's electronic phonebook. You can view these entries and call them directly from your phone.



For email addresses, you can send a text message directly from your phone.

To see the list of names stored in your phonebook, press  > **Phonebook** from the idle display. To show the entries in a category, see “View Category Entries” on page 54.

Scroll to a name and press **VIEW** () to view details of the phonebook entry as shown in the following display.

Items in a Phonebook Entry

Voice Name indicator indicates a recorded voice name

Entry's **Name**

Entry's **phone number, email address, or mailing list**

Type indicator identifies number type:

-  Work
-  Home
-  Main
-  Mobile
-  Fax
-  Pager
-  Email



Entry's speed dial number

(P) indicates entry stored in phone memory, **(S)** indicates SIM memory

Edit entry

Return to list


Press  to open the **Phonebook Menu**

Entry's ringer ID setting

Storing a Phonebook Entry

Find the Feature

 > **Phonebook**

 > **New**

Press

1 

To

scroll to **Phone Number, Email Address, or Mailing List**

2 **SELECT** ()


select the type of entry

Press3 **To**

scroll to the item you want to enter (see the table that follows this procedure).

4 **CHANGE** ()

select the item and add, select, or change information

5 **DONE** () when you are done

store the entry and return to the phonebook list

Phonebook item	Description
Name	enter a name for the phonebook entry (see “Entering and Editing Text” on page 30)
Category	scroll to the category that classifies the entry
No., Email, or Members	enter the phone number or email address, or select phonebook entries to add as members of the mailing list
Type	scroll to the type of phone number (only for phone numbers not stored on the SIM)
Voice Name	record a voice name for the entry. See “Recording a Voice Name for a Phonebook Entry” on page 50.
Speed No.	change the number you use to <i>speed dial</i> the entry
Ringer ID	change the ring tone for calls from this entry



Phonebook item	Description
More	create another entry with the same Name

Recording a Voice Name for a Phonebook Entry

Tip: Make your voice recording in a quiet location. Hold the phone about four inches (10 centimetres) from your mouth, and speak directly into the phone's microphone in a normal tone of voice.

Find the Feature

 > **Phonebook**

Do This

1 Press 

To

scroll to the entry that needs a voice name

2 Press **VIEW** ()

display the entry's detailed view

3 Press **EDIT** ()

edit the phonebook entry


4 Press 

scroll to **Voice Name**

5 Press **RECORD** ()

begin the recording process

The phone displays **Press RECORD Key then say name.**

6 Press and release **RECORD** () and say the entry's name (in two seconds)

record the voice name

The phone displays **Press RECORD Key then REPEAT name.**

7 Press the voice key and repeat the name

confirm the voice name

The phone displays **Trained: Voice Name.**

Dialling a Phonebook Entry

You can use the phonebook list, voice dial, speed dial, or 1-touch dial to call a number stored in your phonebook. To use speed dial, see “Speed Dialling” on page 38. To use 1-touch dial, see “1-Touch Dialling” on page 38.

Phonebook List

To call a number in the phonebook list:

Find the Feature

 > **Phonebook**

Press

To

1 

scroll to the entry you want to call


2 

make the call

Editing a Phonebook Entry




You can edit a phonebook entry stored on your phone or the SIM card.

Notes:

- *If you change an entry's speed dial number, the entry is moved to the new speed dial location and the original entry is deleted. Entries with a speed dial number from 1 to 500 are stored on the phone. Entries with a speed dial number of 501 or higher are stored on the SIM card.*
- *You can also use the following procedure to edit a fixed dial entry by selecting  > **Facilities** > **Fixed Dial**.*

Find the Feature

 > **Phonebook**






Press	To
1 	scroll to the entry you want to edit
2 VIEW ()	display the entry's detailed view
3 EDIT ()	edit the phonebook entry

Edit a phonebook entry or fixed dial entry by following the procedures described in “Storing a Phonebook Entry” on page 48.

Deleting a Phonebook Entry

To delete a phonebook entry:


Find the Feature  > **Phonebook**

















Press	To
1 	scroll to the entry you want to delete
2 	open the Phonebook Menu
3 	scroll to Delete
4 SELECT ()	select Delete
5 YES ()	confirm the deletion

Using Phonebook Categories

Phonebook categories let you use special ring tones and backlight colours for phonebook entries you classify as “Business,” “Personal,” “General,” or other categories.

Create or Edit a Category

Find the Feature  > **Phonebook**
 > **Categories**

Press	To
1 	scroll to a category to edit (select any category if you are creating a new one)
2 	open the Categories menu
3 	scroll to New or Edit
4 SELECT (	select New or Edit
5 CHANGE (	select the category Name
6 keypad keys	enter the category name (see “Entering and Editing Text” on page 30)
7 OK (	store the category name
8 CHANGE (	open the member list
9 	scroll to a phonebook entry you want to add or remove Note: You cannot add entries stored on a SIM card.
10 ADD (	add an unchecked entry
or	
REMOVE (	remove a checked entry
11 DONE (	close the member list
12 CHANGE (	select the category Ringer ID
13 	scroll to the ringer ID to use for calls from category entries
14 SELECT (	select the ringer ID
15 CHANGE (	select the category Backlight
16 	scroll to the backlight colour for calls from category entries

Press	To
17 SELECT (☐)	select the backlight
18 DONE (☐)	store the category and return to the phonebook list

View Category Entries

You can select a category to show only its entries:

Find the Feature	☐ > Phonebook
	☐ > Categories > <i>the category you want to see</i>

Copy Multiple Entries

Find the Feature	☐ > Phonebook
------------------	----------------------

Press	To
1 ☐	open the Phonebook Menu
2 ⦿	scroll to Copy Entries
3 SELECT (☐)	select Copy Entries
4 ⦿	scroll to From [start]
5 CHANGE (☐)	select From [start]
6 keypad keys	enter the low speed dial number for the range of entries you want to copy
7 OK (☐)	store the number
8 ⦿	scroll to From [end]
9 CHANGE (☐)	select From [end]

Press	To
10 keypad keys	enter the high speed dial number for the range of entries you want to copy
11 OK (OK)	store the number
12 (Left Arrow)	scroll to To (start)
13 CHANGE (Change)	select To (start)
14 keypad keys	enter the low speed dial number for the entries' new location
	<i>Note: Enter a speed dial number between 1-500 to copy entries to the phone. Enter a speed dial number of 501 or higher to copy entries to the SIM card.</i>
15 OK (OK)	store the number
16 DONE (Done)	copy the entries

Customising Your Phone Settings

You can adjust a wide variety of phone settings.





Customising Menus and Display

Find the Feature






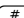 


> Settings > Personalise

You can change settings for these features:




Setting	Description
Main Menu	choose the Icon or List view, and reorder your options Note: <i>The first nine items appear on the main menu. The rest appear under  > Extras.</i>
Keys	change the features linked to your soft keys ( ) and  when your phone is idle
Wallpaper	select your display's background image and layout
Screen Saver	select an image to appear when your phone is idle, and the amount of delay

Using Shortcuts


The following shortcuts are pre-programmed in your phone. You cannot edit or delete them.

Do This	To
Press  	lock/unlock your keypad
Press  	display your phone number
Press 	go to the dialled calls list (See “Viewing Recent Calls” on page 36.)
Press 	exit the menu system, return to the idle display

You can add shortcuts for many menu features and applications. Shortcuts takes you directly to the menu item, or perform the menu action (if applicable).

Do This	To
1 Press 	enter the menu system
2 Scroll to the item you want to add to Shortcuts	highlight the menu item
3 Press and hold 	open the shortcut editor The phone displays: Assign Shortcut for: <i>Item</i>? where <i>Item</i> is the name of the item you selected.
4 Press YES ()	view your options

You can use shortcuts from the idle display, while on a call, or while scrolling through a menu.

Press	To
1 	open the menu
2 the shortcut key number	go to the menu item, or perform the menu action

Setting Your Display Timeout

This is a power-saving feature that turns off your phone's display when it is inactive for a selected idle time. Your display reactivates if you press a key or receive a call.

Find the Feature

-  > **Settings** > **Other Settings**
- > **Initial Setup**
- > **Display Timeout**
- > *selected idle time*

Getting More Out of Your Phone

Using Hands-Free Features



Your phone includes an integrated two-way speakerphone for all hands-free applications. You also receive a hands-free stereo headset, and can purchase an optional Motorola Original™ Easy-Install or Pro-Install Hands-Free Kit for your car. These accessories provide alternative ways for you to use your phone without using your hands.

Dialling Options



Fixed Dialling

When you activate the fixed dial feature, users can only call the numbers in the fixed dial list.

Find the Feature

 > **Settings** > **Security**
> **Fixed Dialling**

Fixed dial list entries can be any length. If there is a fixed dial entry for the digits 555, users can call any number that starts with 555. You must enter your SIM PIN2 code to edit fixed dial entries.


Find the Feature

 > **Facilities** > **Fixed Dial**

In the fixed dial list, you can create, edit, delete, and sort entries just like in the phonebook list. Fixed dial list entries are stored on your SIM card and do not have **Type** or **Voice Name** fields.

Monitoring Phone Use

Your phone tracks and records call times. Use the recent calls menu to view and reset a call timer.

Network connection time is the elapsed time from the moment you connect to the network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by 3. For billing information, please contact 3 directly.

You can view the approximate network connection time elapsed during the following calls:

Timer	Description
Last Call	Time spent on the last call dialed or received. You cannot reset this timer.
Dialed Calls	Total time spent on dialed calls since the last time you reset this timer.
Received Calls	Total time spent on calls received since the last time you reset this timer.
All Calls	Total time spent on dialed and received calls since the last time you reset this timer.
Lifetime	Total time spent on all calls on this phone. You cannot reset this timer.

To view a call timer:

Find the Feature

 > **Recent Calls** > **Call Times**
> *the timer you want*

To reset a call timer, press **RESET** () while viewing it.

Network Features

Network Selection

You can view and adjust your phone's network settings:

Find the Feature

 > **Settings** > **Other Settings**
> **Network**

3 registers your phone to a network. You can view information about the current network, change how your phone searches for a network, specify your preferred networks, and activate alerts that indicate when a call is dropped or network registration changes.

Connecting Your Phone to an External Device

You can connect your phone to a computer or hand-held device using a Bluetooth™ wireless connection, an infrared wireless link, a serial cable, or a USB cable.

Note: *Not all devices are compatible with Bluetooth, infrared, serial cable, or USB cable connections. Check your external device for specifications.*

Setting Up a Cable Connection

Attach a serial cable or Motorola Original USB cable to the phone and external device as follows.

Note: *Check your computer or hand-held device to determine the type of cable you need.*

 
Attaching a Serial Cable

Use the interchangeable head on the Motorola Multi-Connect Serial Cable to connect a computer, Palm III device, or Palm V device to your phone.

Do This

- 1 Plug the serial cable into the detachable head. Make sure that the Motorola logo on the detachable head and the metal shielding on the serial cable plug are both facing you.
-

- 2 With the Motorola logo and the phone both facing you, plug the detachable head into your phone's accessory connector port.

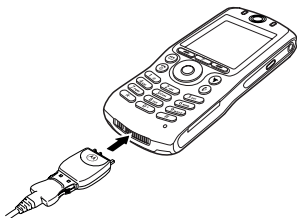


- 3 Plug the other end of the cable into the serial interface connection on the external device and tighten the screws.
-
-

Note: To save phone power when using a serial cable, plug a charger into the charger slot on the cable head.

Attaching a USB Cable

Do This

 - 1 Plug the end of the cable with the Motorola logo into your phone's accessory connector port. Make sure that the logo and the phone are both facing you.

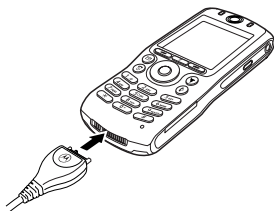

- 2 Plug the other end—the USB connection—into the USB port on the external device.
-
-

Setting Up an Infrared Connection

Establish an infrared wireless data connection with an external device as follows.

Notes:

- *This phone is classified as a Class 1 LED product and is considered safe under reasonable use.*
- *Your phone must be within one foot (30 centimetres) of the other device. Nothing can block the line of sight between the two devices.*
- *You cannot set up an infrared connection when a serial cable is attached to your phone.*

Find the Feature

 > **Settings** > **Connection**
> **IrDA Link**

Press

START ()

To

activate the infrared link


If the phone does not find an infrared-capable device, it changes the right softkey () from **STOP** to **START**.

Press

START ()

To

try another connection

To break the infrared data connection, press **STOP** ()

You can also move the device away from the phone, turn off the device, or turn off the phone. If your phone moves away from a connected device while it is still on, it will try to re-connect for 30 seconds after the connection breaks.

Setting Up a Bluetooth Connection

Before connecting your phone to another Bluetooth device, set up the other device as described in its user guide.

For a PC, set up the Bluetooth accessory card, card drivers, and application software. If you want to use Fax or Dial-up Networking Services, configure them for the Bluetooth modem as described in the software and modem user guides.

Connecting a Computer for a Fax or Data Call

Prepare your computer to set up the Bluetooth connection, then make your phone available for the connection:

Find the Feature


 > **Settings** > **Connection**
> **Bluetooth Link** > **Setup**
> **Find Me**

You have 60 seconds to start the connection from your computer while your phone is available.

Connecting a Headset

To connect an available Bluetooth headset device:

Find the Feature

 > **Settings** > **Connection**
> **Bluetooth Link** > **Handsfree**
> *a device name*
or
[Look For Devices]

Your phone returns to the idle display, where a Bluetooth status bar icon indicates that you have a connection.

To disconnect:

Find the Feature

 > **Settings** > **Connection**
> **Bluetooth Link** > **Handsfree**
> *the device name*

Turning Bluetooth On or Off

You can turn your phone's Bluetooth feature on or off:

Find the Feature

 > **Settings** > **Connection**
> **Bluetooth Link** > **Setup**
> **Power** > **On or Off**

Data and Fax Calls



A Motorola Original™ data kit with a cable or a Bluetooth™ wireless connection lets you transfer data between your phone and a computer or other external device. You can:

- use your phone as a modem to connect to the Internet.
- use your phone to make and answer data and fax calls on your computer or hand-held device.

Using Sync

This feature lets you quickly synchronise your events and Phonebook entries with a local computer, or with an Internet server using a wireless connection.

Creating an Internet Sync Partner

To enter a computer as a Sync partner for your phone:

Find the Feature

 > **Settings** > **Connection**
> **Sync** > **New**

Your phone opens a **Partner Details** list:

Detail	Description
Partner Name	A common name you assign to the computer (such as "Work server")
Server URL	The URL for the server (you can omit "http://")
User Name	Your user name for logging into the server
Password	Your password for logging into the server
(data) Path	The name of the folder, beneath the URL path, where your data is stored

Using an Internet Sync Partner

To start synchronising with a Sync partner:

Find the Feature

 > **Settings** > **Connection**
> **Sync** > *partner name*

Your phone attempts a Sync connection with the URL, user name, and password you entered for the partner. This might take several minutes, if there are many entries to synchronise.

Using a Local Sync Partner

To use Sync with a local partner such as a connected desktop computer, you must install Starfish TrueSync® software, a Motorola accessory product. See the TrueSync user guide for more information.

Note: *TrueSync software is designed to synchronise with basic features of many popular Personal Information Management (PIM) software and hardware products.*

Start the Sync action on the connected computer. To connect a computer, see “Connecting Your Phone to an External Device” on page 61.

Using an SD or MMC Card

You can purchase Secure Digital or Multimedia Cards to store or load large files such as videos, pictures, or sound.





To Insert a Card

- 1 Insert the card in the slot in the side of your phone (see the diagram on page 1). Insert the narrow side with the cut corner first, with the exposed pins facing the back of the phone. Insert the card until it clicks in place.

To Insert a Card

- 2 Your phone should display the card contents or (if new) ask you to format it. If it does not, select  > **Settings** > **Phone Status** > *card name*

To store an item on your card, open it and press **STORE** () , if available, or press  > **Store**. You can store the file only, or make it a setting on your phone (such as ring tone or wallpaper).

To remove a card, push it in to trigger the release spring that ejects the card. The phone should push the card out enough that you can grab it and pull it the rest of the way out of the phone.

Security

Line Security

If your phone displays **Line Not Secure** while you are on a call, your phone has detected another device monitoring the call. This message does not appear when caller ID, call cost, or other information fills the display.

Locking and Unlocking Your Phone

A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*

Lock Your Phone Manually

Find the Feature

 > **Settings** > **Security**
> **Phone Lock** > **Lock Now**

Set Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature

 > **Settings** > **Security** > **Phone Lock**
> **Automatic Lock** > **On**

Changing Your Unlock Code

Your phone's four-digit unlock code is originally set to 1234, and the six-digit security code is originally set to 000000.

We recommend that you change them to prevent other users from accessing your personal information or modifying your phone settings. The unlock code must contain four digits, and the security code must contain six digits. Be sure to make a note of the new numbers.

Find the Feature

 > **Settings** > **Security**
> **New Passwords**

Press

To

1 

scroll to the code or password you want to change

2 **CHANGE** ()

select the code or password

3 keypad keys

enter your old code

If you do not know your code, see “If You Forget Your Unlock Code” on page 70.

4 **OK** ()

submit your old code

5 keypad keys

enter the new code

6 **OK** ()

assign the new code

7 keypad keys

re-enter the new code

8 **OK** ()

confirm the new code

If You Forget Your Unlock Code

If you forget your security code (originally set to 000000), SIM PIN, SIM PIN2, or call barring password, contact 3.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, do the following when you see the **Enter Unlock Code** message:

Press

To

1 

go to the unlock code bypass screen

2 keypad keys

enter your security code

3 **OK** ()

submit your security code

Locking and Unlocking the Keypad

This feature is useful in situations where an accidental keypress might inadvertently dial an emergency number or one-touch dial number (for example, when carrying your phone in a purse or pocket).

Press



To

lock or unlock your keypad

Note: Incoming calls and messages unlock the keypad.

Protecting the SIM Card

When the SIM PIN feature is activated, you must enter your SIM card PIN code each time you turn on the phone or insert a SIM card. Contact **3** for your SIM card PIN code.

Find the Feature

 > **Settings** > **Security**
> **SIM PIN**

Unblock the SIM Card PIN Code

If you enter an incorrect SIM card PIN code three times in a row, your SIM card is disabled and your phone displays the message **SIM Blocked**. You need to enter a PIN unblocking key (PUK) code, which you can obtain from **3**.

Personal Organiser Features

Calendar

The calendar lets you schedule and organise events such as appointments and meetings. You can review your schedule of events for the week or by the day, and have your phone play a reminder alarm for specific events.

Note: You must set the correct time and date in order to use the calendar (see “Setting the Time and Date” on page 29).

Storing a New Event

A title is required for a calendar event. All other information is optional.

Find the Feature

 > **Office Tools** > **Calendar**
> *day*
 > **New** > **Event**

Press

1 **CHANGE** ()

2 keypad keys

3 **OK** ()

4 

To

select **Title**

enter a title for the event (see “Entering and Editing Text” on page 30)

store the event title

scroll to other fields and enter information as necessary

Other fields let you enter start time, duration, date, repeating events, and reminder alarm.

Press	To
5 DONE (⏪)	store the new event and return to the day view

Changing Event Information

To change information about an existing event:

Find the Feature	(☰) > Office Tools > Calendar > <i>day</i> > <i>event</i>
-------------------------	--

Press	To
1 EDIT (⏪)	edit the event
2 (○)	scroll to the detail you want to change
3 CHANGE (⏪)	edit the information
4 keypad keys	enter the new information
5 DONE (⏪)	store the information and return to the day view

Alarm Reminders

Reminders are alerts that ring or vibrate to notify you about a voicemail or text message you have received, or a calendar event you have scheduled.

To set or turn off reminders:

Find the Feature	(☰) > Ring Styles > Alert Detail > Reminders
-------------------------	--

Press

1 

To

scroll to the reminder alert you want: **Beep**, **Vibrate**, or **Off**

Beep or **Vibrate** sets the corresponding reminder alert type. **Off** turns off all reminders.

2 **SELECT** ()

select the reminder alert

Voice Notes

You can use the voice note feature to record personal messages and phone calls on your phone.

Record a Voice Note

Use this procedure to record a voice note from the idle display, or to record a phone call in progress. Your phone plays an alert tone to notify the other party that the call is being recorded.

Note: *Recording phone calls is subject to varying laws regarding privacy and recording of conversations.*

Tip: Make your recording in a quiet location. Hold the phone about four inches (10 centimetres) from your mouth, and speak directly into the phone in a normal tone of voice.

Do This

1 Press and hold the voice key for the duration of the recording.

2 Speak your voice note.

3 Release the voice key to stop recording.

Result

The phone sounds an alert tone and begins recording.

 
The phone records the voice note.

The phone displays the voice note number and total recording time.

View the Voice Notes List

Find the Feature

 > Office Tools > Voice Notes

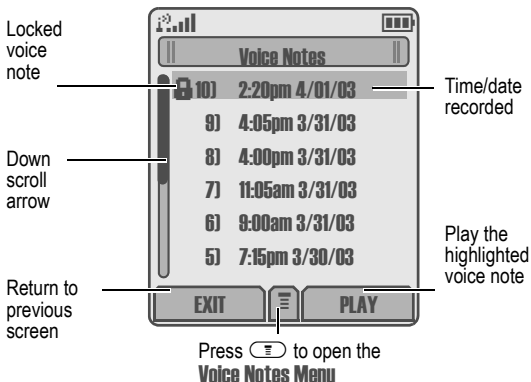

Play a Voice Note

Find the Feature

 > Office Tools > Voice Notes

Press

1 

To

scroll to the voice note

2 **PLAY** ()

play the voice note

Tip: You can play a voice note while on a call. It will not be transmitted to the other party.

Lock and Unlock a Voice Note

Lock a voice note to prevent it from being deleted. You must unlock a voice note to delete it.

Find the Feature

 > **Office Tools** > **Voice Notes**

Press

To

1 

scroll to the voice note

2 


open the **Voice Notes Menu**

3 

scroll to **Lock** or **Unlock**

4 **SELECT** ()

lock or unlock the voice note

To lock or unlock a voice note during playback, press  and select **Lock** or **Unlock**. Playback stops when you lock or unlock a voice note. Press any number key to resume playback.

Delete a Voice Note

Find the Feature

 > **Office Tools** > **Voice Notes**

Press

To

1 

scroll to the voice note

2 

open the **Voice Notes Menu**

3 

scroll to **Delete** or **Delete All**

4 **SELECT** ()

select the highlighted option

5 **YES** ()

confirm the deletion

or

NO ()

cancel deletion

Calculator and Currency Converter


You can use your phone as a convenient calculator and currency converter.

 
Find the Feature

 > Office Tools > Calculator

Selected function appears here

Press  to enter a function

Press  to open the **Calculator Menu**

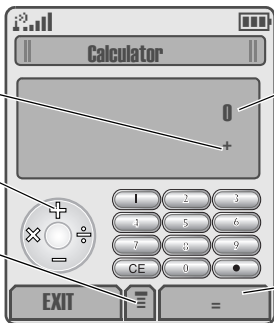

Entered number




Calculate the function

Press  to open the Calculator Menu functions:

Function	Description
MS	Store the displayed number in memory.
MC	Clear memory.
MR	Recall the value stored in memory.
%	Divide the displayed value by 100.
Convert Currency	Multiply the displayed value by the Exchange Rate you stored.
Exit	Exit the calculator.
Exchange Rate	Store an exchange rate to use with the Convert Currency menu option.

News and Entertainment

 
 



Mobile Internet

3 provides services for you to use over the Internet. Select **Browser** or press  to open a menu of the services. To get back to this menu when you are in a service, just press . To stop browsing, press . To open the Web micro-browser:

Find the Feature

 > **WebAccess** > **Browser**

 If you are unable to establish a network connection with the micro-browser, contact 3.

Do This	To
Press 	scroll through a page
Press 	go back to the previous page or forward to the next one
Press 	open the Browser Menu
Press  	lock your phone's keypad while downloading a file

Download Pictures and Sounds

You can download a picture, animation, or sound from a Web page by selecting its link.

Note: To save phone memory, store graphic, video, and sound files on an SD/MMC card. See "Using an SD or MMC Card" on page 67.



Storing a Picture or Animation File

Press	To
1 STORE (⏪)	view storage options
2 ⓪	scroll to Store Only , Set As Wallpaper , or Set as Screen Saver
3 SELECT (⏪)	select the option

Storing a Sound File

Press	To
1 STORE (⏪)	view storage options
2 ⓪	scroll to Store Only or Set As Ring Tone
3 SELECT (⏪)	select the option If you select Store Only , the procedure is complete. If you select Set As Ring Tone , your phone displays Set As Which? , and lists the events for which you can set an alert.
4 ⓪	scroll to the event
5 SELECT (⏪)	store the sound and set it as the event alert

Java Applications



You can install and run Java applications on your phone. These applications add new features and services to your phone. New games and applications are available from **3** and can be accessed by pressing ⓪. Contact **3** for more details.

Download an Application With the Micro-Browser

Find the Feature

 > **WebAccess** > **Browser**

Go to the page that contains the Java application you want, then:

Press

To

1 

scroll to the application

2 **SELECT** ()

view the application details

3 **DOWNLOAD** ()

download the application

Launch a Java Application

Find the Feature

 > **Games & Apps**
> *the application*

If the application requires an Internet connection, your phone prompts you to approve the connection.

Camera and Picture Viewer

The camera attachment is not available on all phones.

To capture pictures on your phone, install the camera as described in “Reinstalling the Camera” on page 16.

Capture Pictures

To take a picture, attach the camera/video accessory to your phone and follow these steps:

Find the Feature

 > **Media Centre** > **Pictures**
> **[New Picture]**

The image in the camera's viewfinder appears on your phone's display

Do This	To
1 Point your phone at the subject of the picture	find the picture you want to take
2 Press CAPTURE (⏻)	freeze the picture in your phone's display
3 Press STORE (⏻)	store the captured picture as a file, wallpaper, screen saver, or message attachment

Note: To save phone memory, store graphic, video, and sound files on an SD/MMC card. See "Using an SD or MMC Card" on page 67.



Download Pictures






You can download pictures and animations to your phone and use them as wallpaper or a screen saver.

To download a picture or animation from the micro-browser, see page 78. To download a picture or animation from a text message, see page 46.

View Pictures

Find the Feature ⏻ > **Media Centre** > **Pictures**

Press	To
1 ⏻	scroll to the picture
2 SELECT (⏻)	view the picture

Press	To
3  left or right	view the previous/next picture
or	
DETAILS 	view picture information
or	
	open the Picture Viewer menu to perform other procedures as described in the following list

The **Picture Viewer** menu includes the following options:

Option	Description
New Picture	Capture a new picture
New Slideshow	Create a slideshow from a series of stored pictures
Set as Wallpaper	Set the picture as your phone's wallpaper image.
Set as Screen Saver	Set the picture as your phone's screen saver image.
Set as Power-Up Animation	Set the picture as the image that appears when you turn on your phone.
Details	View picture information.

To adjust your phone's wallpaper and screen saver images, see page 56.

Video Recorder and Viewer

The camera attachment is not available on all phones.

To capture videos on your phone, install the camera as described in “Reinstalling the Camera” on page 16.




Record Videos

To record a video, attach the camera/video accessory to your phone and follow these steps:

Find the Feature

 > **Media Centre** > **Videos**
> **[New Video]**

The image in the camera’s viewfinder appears on your phone’s display

Do This	To
1 Point your phone at the subject of the video	find the scene you want to record
2 Press CAPTURE ()	start recording the scene in your phone’s display
3 Press STOP ()	stop recording
4 Press STORE ()	store the captured video as a file or message attachment

Note: To save phone memory, store graphic, video, and sound files on an SD/MMC card. See “Using an SD or MMC Card” on page 67.



Watch Videos

Find the Feature

 > **Media Centre** > **Videos**

Press

To

1 

scroll to the video

2 **PLAY** ()

view the video

3 **DETAILS** ()

view video information

or



open the **Video Player** menu to perform other procedures as described in the following list

Games

You can download Java games to your phone (“Download an Application With the Micro-Browser” on page 80). If you get an incoming call, message, alarm, or alert, the game ends automatically. To open a game that is on your phone:

Find the Feature

 > **Games & Apps**

Press

To

1 

scroll to the game of your choice

2 **SELECT** ()

start the game

When the game is over, you can play another session of the same game or return to the games menu.

SIM Applications



You can access information and applications stored on your SIM card.

To access the available applications:

Find the Feature









> Facilities > SIM Applications

Contact **3** for more details.

Troubleshooting

Check these questions first if you have problems with your phone:

Question	Answer
Is your battery charged? Do you see  in the display?	The battery level indicator should have at least one segment showing (). If it does not, recharge your battery. (See “Charging the Battery” on page 20 and “Battery Use” on page 21.)
Do you have a valid SIM card inserted in your phone?	If necessary, turn off your phone and make sure that you have inserted a valid SIM card. (See “Installing the SIM Card” on page 17).
Does the handset have a signal? Do you see  in the display?	The signal strength indicator should have at least one segment showing (). If it does not, move to an area with a stronger signal to use your phone.
Is the earpiece volume too low?	While on a call, press the top of the  key.
Is the other party unable to hear you?	Your phone may be muted. Press UNMUTE () if necessary to unmute the phone. Also, make sure that your phone’s microphone is not blocked by its carrying case or a sticker.

Question	Answer
Has the phone been damaged, dropped, or got wet?	Dropping your phone, getting it wet, or using a non-Motorola battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
Was a non-Motorola battery charger used?	

Warranty Information

Motorola guarantees you, the original purchaser, the Personal Communicator and accessories which you have purchased from an authorised Motorola dealer (the "Products"), to be in conformance with the applicable Motorola specifications current at the time of manufacture for a term of [1] year from date of purchase of the Product(s) (Warranty Term).

You must inform Motorola of the lack of conformity to the applicable specifications of any of the Products within a period of two (2) months from the date on which you detect a defect in material, workmanship or lack of conformity and in any event within a term not to exceed the Warranty Term, by submitting the Product for service to Motorola. Motorola shall not be bound by Product related statements not directly made by Motorola nor any warranty obligations applicable to the seller.

A list of the Motorola Call Centre numbers is enclosed with this Product.

During the Warranty term, Motorola will, at its discretion and without extra charge, as your exclusive remedy, repair or replace your Product which does not comply with this warranty; or failing this, to reimburse the price of the Product but reduced to take into account the use you have had of the Product since it was delivered. This warranty will expire at the end of the Warranty Term.

This is the complete and exclusive warranty for a Motorola Personal Communicator and accessories and in lieu of all other warranties, terms and conditions, whether express or implied.

Where you purchase the product other than as a consumer, Motorola disclaims all other warranties, terms and conditions express or implied, such as fitness for purpose and satisfactory quality.

In no event shall Motorola be liable for damages nor loss of data in excess of the purchase price nor for any incidental special or consequential damages* arising out of the use or inability to use the Product, to the full extent such may be disclaimed by law.

This Warranty does not affect any statutory rights that you may have if you are a consumer, such as a warranty of satisfactory quality and fit for the purpose for which products of the same type are normally used under normal use and service, nor any rights against the seller of the Products arising from your purchase and sales contract.

(*)including without limitation loss of use, loss of time, loss of data, inconvenience, commercial loss, lost profits or savings.

How to get warranty service?

In most cases the authorised Motorola dealer which sold and/or installed your Motorola Personal Communicator and original accessories will honour a warranty claim and/or provide warranty service. Alternatively, for further information on how to get warranty service please contact either the customer service department of your service provider or Motorola's call centre at the telephone numbers below for your country.

In order to claim the warranty service you must return the Personal Communicator and/or accessories in question to Motorola. Please avoid leaving any supplementary items like SIM cards. The Product should also be accompanied by a label with your name, address, and telephone number; name of operator and a description of the problem. In the case of vehicular installation, the vehicle in which the Personal Communicator is installed should be driven to the Authorised Repair Centre, as analysis of any problem may require inspection of the entire vehicular installation.

In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The phone should also clearly display the original compatible electronic serial number (IMEI) and mechanic serial number [MSN]. Such information is contained with the Product.

Conditions

This warranty will not apply if the type or serial numbers on the Product has been altered, deleted, duplicated, removed, or made illegible. Motorola reserves the right to refuse free-of-charge warranty service if the requested documentation can not be presented or if the information is incomplete, illegible or incompatible with the factory records.

Repair, at Motorola's option, may include reflashing of software, the replacement of parts or boards with functionally equivalent, reconditioned or new parts or boards. Replaced parts, accessories, batteries, or boards are warranted for the balance of the original warranty time period. The Warranty Term will not be extended. All original accessories, batteries, parts, and Personal Communicator equipment that have been replaced shall become the property of Motorola. Motorola does not warrant the installation, maintenance or service of the products, accessories, batteries or parts.

Motorola will not be responsible in any way for problems or damage caused by any ancillary equipment not furnished by Motorola which is attached to or used in connection with the Products, or for operation of Motorola equipment with any ancillary equipment and all such equipment is expressly excluded from this warranty.

When the Product is used in conjunction with ancillary or peripheral equipment not supplied by Motorola, Motorola does not warrant the operation of the Product/peripheral combination and Motorola will not honour any warranty claim where the Product is used in such a combination and it is determined by Motorola that there is no fault with the Product. Motorola specifically disclaims any responsibility for any damage, whether or not to Motorola equipment, caused in any way by the use of the Personal Communicator, accessories, software applications and peripherals (specific examples include, but are not limited to: batteries, chargers, adapters, and power supplies) when such accessories, software applications and peripherals are not manufactured and supplied by Motorola.

What is not covered by the warranty

This warranty is not valid if the defects are due to damage, misuse, tampering, neglect or lack of care and in case of alterations or repair carried out by unauthorised persons.

- 3** Defects or damage resulting from use of the Product in other than its normal and customary manner.
- 4** Defects or damage from misuse, access to incompatible sources, accident or neglect.
- 5** Defects or damage from improper testing, operation, maintenance, installation, adjustment, unauthorised software applications or any alteration or modification of any kind.
- 6** Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- 7** Products disassembled or repaired in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim.
- 8** Defects or damage due to range, coverage, availability, grade of service, or operation of the cellular system by the cellular operator.
- 9** Defects or damage due to moist, liquid or spills of food.
- 10** Control unit coil cords in the Product that are stretched or have the modular tab broken.
- 11** All plastic surfaces and all other externally exposed parts that are scratched or damaged due to customer normal use.
- 12** Leather cases (which are covered under separate manufacturer's warranties).
- 13** Products rented on a temporary basis.
- 14** Periodic maintenance and repair or replacement of parts due to normal wear and tear.

Note: *The talk-time, stand-by time and total life cycle of a Motorola rechargeable battery for your Personal Communicator will depend on usage conditions and network configurations. As a consumable product, the specifications indicate that you should be able to obtain optimum performance for your Motorola Personal Communicator within the first six months from date of purchase and up-to (200) charges.*

The warranty for Motorola rechargeable batteries becomes void if (i) the batteries are charged other than by Motorola approved battery chargers specified for the charging of the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, (iii) the battery is used in equipment or service other than the cellular telephone equipment for which it is specified.

Specific Absorption Rate Data

This model phone meets international standards for exposure to radio waves

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.* Tests for SAR are conducted in accordance with CENELEC** testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions and locations (e.g., at the ear and worn on the body) that conform to a uniform testing methodology determined by an expert standards body. See the printed copy of your User Guide for SAR test values

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that modifications to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

- * The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
- ** CENELEC is a European Union standards body.
- *** Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

A

accessories

- connector ports 1
- optional 16, 59, 65
- standard 16

alert

- defined 29
- indicators 26, 29
- muting 23
- reminders 73
- setting 79
- type, selecting 29

alert profile 29

animation 30

- screen saver, setting 79, 82
- storing 78
- using 81–82
- wallpaper, setting 79, 82

B

backlight 30

barring calls 40

battery

- charging 20
- extending battery life 21–22, 30
- installing 19–20

level indicator 20, 27

Bluetooth 61, 65

Bluetooth connection

setting 64

browse text mode 30

browser. See micro-browser

C

calculator 77

calendar

adding an event 72–73

alarm 72

changing event information 73

reminders 72, 73

call

alert profile, setting 29

alert type, selecting 29

alert, muting 23

answering 24

barring 40

call waiting 38

calling card 36

dialling 23–24

emergency number 35

ending 24

hold 41

making 23–24

- placing 23–24
- receiving 24
- timing 59
- transferring 39–40
- voice dial 37
- call barring 40
- call diverting 39
- call timers 59
- call waiting 38
- caller ID
 - incoming calls 34
- calling card call 36
- calling line identification. *See* caller ID
- clock 25
- computer
 - connecting to phone 61
 - synchronising data 67
- conference call 41
- copy text 32
- cut text 32

D

- data call
 - connecting to external device 61
 - wireless connection 63, 64
- date, setting 29
- default passwords 69
- dialling
 - voice dial 37

- dialling a number 23–24
- display
 - animation 30
 - backlight 30
 - described 25–26
 - illustration 25
- diverting calls 39
- DTMF tones 59

E

- earpiece
 - illustration 1
 - volume, adjusting 23
- emergency number 35
- end key
 - functions 1, 24
- ending a call 24
- Enter Unlock Code** message 70
- event alert 29
- external device
 - connecting to phone 61
 - synchronising data 67

F

- fax call
 - connecting to external device 61
 - wireless connection 63, 64
- fixed dial
 - defined 59
 - dialling numbers 59

- editing an entry 51–52, 59
- storing an entry 48–50

frequency, changing 61

G

games 84

H

hold a call 41

I

Incoming Call message 34

indicators

- alert setting 26, 29
- battery level 20, 27
- menu 25
- message 26
- ring alert 26
- service 26
- signal strength 25
- silent alert 26
- text entry 26
- vibrate alert 26
- voice name 48

infrared connection

- setting 63

IrDA link 61, 63

J

Java applications 79–82

joystick 27

K

key

- end 1, 24
- left soft key 1
- menu 1
- power 22
- right soft key 1
- send 1, 24
- voice 50, 74
- volume control 23

keypad

- volume, setting 29

L

left soft key

- functions 1

lock

- phone 69
- SIM card 71
- voice notes 76

loud ring alert 26

M

making a call 23–24

menu

- Browser Menu** 78
- Calculator Menu** 77
- entering text 30–33

- features 59
- navigating 27, 28
- Phonebook Menu** 48
- Picture Viewer** 82
- Shortcuts 57–58
- Voice Notes Menu** 75
- menu indicator
 - illustration 25
- menu key 1
- message
 - outbox 46
 - receiving 46
 - reminders, text message 73–74
 - reminders, voicemail 73–74
 - sending 43
 - status 46
 - voicemail 37
- message indicator
 - defined 26
- micro-browser
 - animation 78
 - Browser Menu** 78
 - defined 78
 - functions 78
 - go back to previous page 78
 - Java applications 79–82
 - picture 78
 - sound 78
 - starting 78
- microphone 1

N

- 'n' character 36
- network settings 61
- numeric text mode 30

O

- 1-touch dial
 - defined 38
 - setting preference 38
 - using 38
- optional accessory, defined 16
- optional feature, defined 16
- outbox 46

P

- passwords
 - changing 69
 - default 69
- paste text 32
- pause character 36
- phone
 - accessories, optional 16
 - accessories, standard 16
 - connecting to external device 61
 - date, setting 29
 - frequency, changing 61
 - locking 69
 - network settings 61
 - 1-touch dial 38

- passwords 69
 - security code 70
 - speed dial, using 38
 - text entry indicator 26
 - time, setting 29
 - turning on/off 22
 - unlock code 70
 - unlocking 23, 69
 - voice dial 37
 - wireless connection 63, 64
 - phone number
 - redialling 34
 - storing in phonebook 48–50
 - voice dial 37
 - phonebook
 - copying entries 54–55
 - deleting an entry 52
 - dialling a number 37, 51
 - editing an entry 51–52
 - email address 48
 - entry name 48
 - fields 48
 - number type indicator 48
 - 1-touch dial 38
 - phone number 48
 - speed dial number 38, 48, 49
 - speed dial, using 38
 - storing an entry 48–50
 - synchronising entries 67
 - voice name entry 50
 - voice name indicator 48
 - picture
 - screen saver, setting 79, 82
 - storing 78
 - using 81–82
 - wallpaper, setting 79, 82
 - PIN code
 - activating/deactivating 71
 - protecting the SIM card 71
 - unblocking 71
 - PIN2 code 59
 - power key 22
 - profile
 - customising 29
 - setting 29
 - PUK code 71
- ## R
- receiving a call 24
 - redial
 - busy number 34
 - reminders
 - calendar 72
 - setting 73
 - text message 73–74
 - voicemail message 73–74
 - right soft key
 - functions 1
 - ring alert
 - indicators 26
 - muting 23

- setting 29
- type, selecting 29
- ring and vibrate alert indicator 26
- muting 23
- ringer
 - setting 29
 - volume, adjusting 23, 29

S

- screen saver
 - setting 79, 82
- security code 70
- send key 1, 24
- sending a call. *See* making a call
- service indicator
 - defined 26
- short message service. *See* text message
- signal strength indicator
 - defined 25
- silent alert indicator 26
- SIM applications 85
- SIM Blocked** message 23, 71
- SIM card
 - applications 85
 - defined 17
 - installing 17–18
 - PIN code entry 23
 - precautions 17

- protecting 71
- SIM Blocked** message 23, 71
- unlocking 71
- unlocking 23
- SIM PIN code
 - activating/deactivating 71
 - protecting the SIM card 71
 - unlocking 71

- SIM PIN2 code 59

- SMS. *See* text message

- soft keys

- illustration 1

- soft ring alert 26

- sound

- setting as alert tone 79

- storing 78

- speakerphone

- volume, adjusting 23

- speed dial

- changing number 49

- number, defined 38

- using 38

- synchronising data 67

T

- text

- browse mode 30

- character chart 31

- copy 32

- cut 32

- entering from keypad 30–33

- entry mode, changing 30–31
- numeric mode 30
- paste 32
- undo 32
- text entry indicator
 - defined 26
- text message
 - receiving 46
 - reminders 73–74
 - sending 43
 - status 46
- text mode, changing 30–31
- time, setting 29
- timers 59
- transfer a call 39–40
- travel charger, using 20
- TrueSync 67

U

- unblocking the SIM card 71
- undo copy, cut, or paste 32
- unlock code 69, 70
 - entering 23

V

- vibrate alert
 - indicator 26
 - muting 23
 - setting 29
 - type, selecting 29
- voice dial

- dialling a number 37
- recording voice name 50
- voice key
 - dialling a number 37
 - recording a voice note 74
- voice name
 - phonebook indicator 48
 - recording 50
- voice note
 - defined 74
 - locking and unlocking 76
- voice notes 74–76
- voicemail 37
- volume
 - earpiece 23
 - keypad 29
 - ringer 23, 29
 - speakerphone 23
- volume keys 23

W

- wait character 36
- wallpaper 79
 - setting 82

6809455A61